



# Pergola Top Installation Guide



[www.CapeCodShowerKits.com](http://www.CapeCodShowerKits.com)

# Pergola Roof Ingredients



## Step #1: Unpack your box

You should have received the following parts:


- 2 – Pergola Lattice Roof Panels
- 2 – Fascia Boards
- 5 – 2x2 Top Vanes
- 1 – Hardware Packet of 26 screws and a driver

## Required Tools:

Drill

Tape Measure

*That's it!*

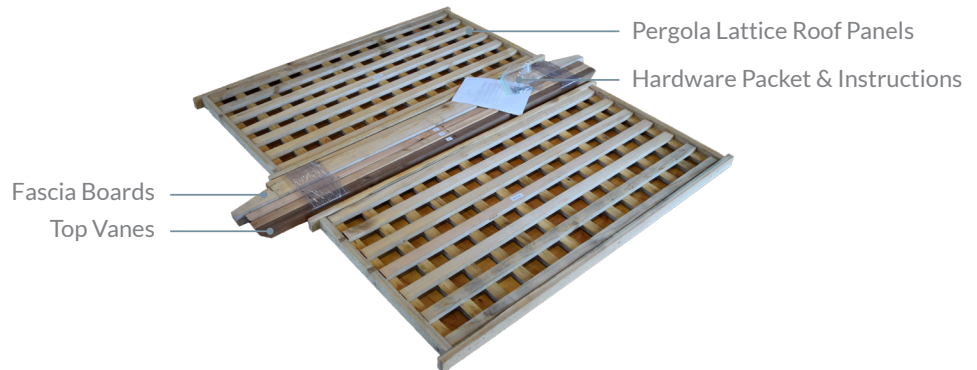

## Step #2: Roof Panel Assembly

Locate a flat surface (table top, garage floor or driveway) to begin your assembly process on.



Using 3 screws from the hardware packet, attach the 2 roof panels together. You will see pre-drilled holes in the panels.



The sticker that says "BOTTOM" should be facing you. Be sure to flush the ends of the 2 panels prior to screwing them together.

## Step #3: Fascia Board Assembly



Attach the front and rear fascia boards to the ends of the roof panels. Be sure the rough side of the fascia is facing out and the "BOTTOM" sticker is facing you.




Install the fascia using 4 screws in the pre-drilled locations on both ends of your pergola top. Be sure to align the set marks on the fascia with the outer edges of the pergola top.




## Step #4: Top Vane Assembly



Flip the assembly over to install the 2x2 vanes.

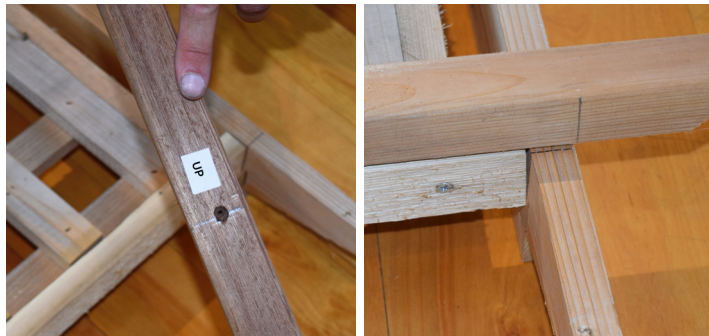

Be sure to use the predrilled holes and make sure the "UP" stickers are facing you. The vanes are marked with reference lines to allow the correct amount of overhang on each end.

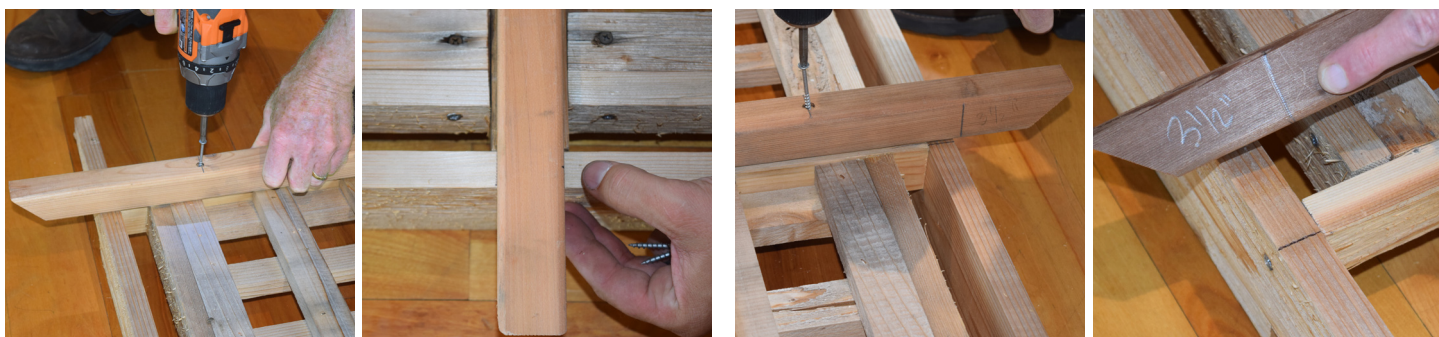

The vanes should be installed with the bevel cut facing down, one each to the right and left outside edge, one centered on the joint and the last 2 centered on the panels themselves.

## Step #5: Installing Your New Pergola Top



Remove your existing post caps if you have them, and install your new pergola top. It drops over the front and rear posts of your kit. The fascia boards face toward the front and rear.



No hardware is required to attach the top. NOTE: The post caps do not get reinstalled.



# Congrats!

That's it! Just add water!

